

# **INSTALLATION GUIDE - AUSTRALIA**



# **AXISS RAIN HEAD CEILING MOUNTED AXRHCMCA**

#### SYSTEM REQUIREMENTS

To ensure the optimum performance and customer satisfaction please adhere to the following:

- Flush out all pipe work prior to installation.
- Installation should comply with relevant local authority requirements.


	MINIMUM	MAXIMUM
Operating Pressures	35kPa (5.1psi)	500kPa (72.1psi)
Operating Hot Water Temperatures	55° C	60° C
Operating Cold Water Temperatures	5° C	N/A



Failure to comply with the above will void warranties

⚠ AS/NZS 3500.1 states that pressures above 500kPa can cause damage from water hammer, reduce the life of appliances, taps & fittings, cause excessive noise in the system and recommend that a pressure limiting valve (PLV) be fitted.

#### WHAT IS IN THE PACK

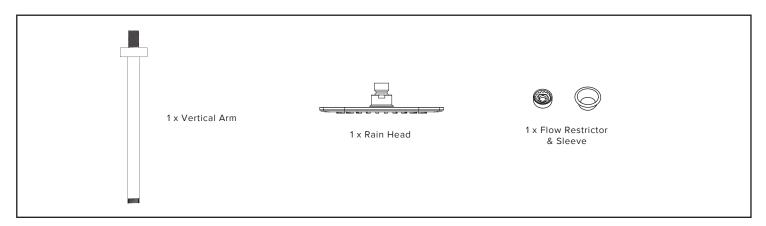

### Warranty, Maintenance and Care YOUR COPY TO KEEP

Felton Industries Limited guarantees these mixers to be free from defects in materials and workmanship for a period of five (5) years from the date of purchase. This warranty is effective for 5 years from the date of purchase and covers supply of replacement parts only, not including installation. You must retain proof of purchase of the Mixer (such as an invoice or receipt) and provide this to Felton on request. This warranty is for manufacturing defects only and does not cover any damage to product due to abuse, negligence or improper installation. This warranty is given on the understanding that the product is installed and operated according to Felton's installation guide and the Australian/New Zealand standard AS/NZS3500. This warranty is provided to persons who are a "consumer" under the Consumer Guarantees Act 1993 only and for use in domestic/residential dwellings only (not for commercial use).



At no stage should plated surfaces be cleaned with cleaning agents that contain a corrosive acid or a scouring additive. Plated surfaces should be cleaned with liquid detergent or soap and water. Any damage caused through the use of an unsuitable cleaner will not be covered by warranty.

This warranty is subject to any other rights or remedies that you may have under the Consumer Guarantees Act 1993 (or any other applicable legislation) and to Felton's Terms of Trade.


Please f	ill in	the	details	below,	attach	your	receipt	to this	installation	n guide	and	keep	as yc	our proof	of	purchase.
----------	--------	-----	---------	--------	--------	------	---------	---------	--------------	---------	-----	------	-------	-----------	----	-----------

	,	•	0		•			
Purchased at:	 			 	 	 	 	 
Date of purchase:								 
nstalled by:	 			 	 	 	 	 


For technical assistance please ring: 1800 792 760

## **HOW TO INSTALL**

# INSTALLING INTO STUD/NOG... (RECOMMENDED)

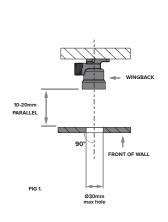

 Ensure the wingback when fitted is parallel and square to the finished ceiling lining as shown (fig 1).

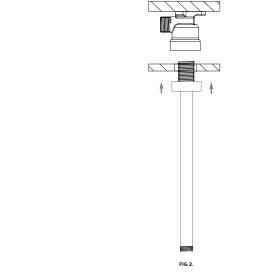

2. Apply seal thread tape to BSP and thread the vertical arm into the wingback.

- 3. Flush supply lines.
- 4. For Mains Pressure, fit the flow restrictor first and then screw the rain head onto the arm (fig 3).
- 5. Turn on water supply and check for leaks.

